


SimCam Indoor 1S

User Manual

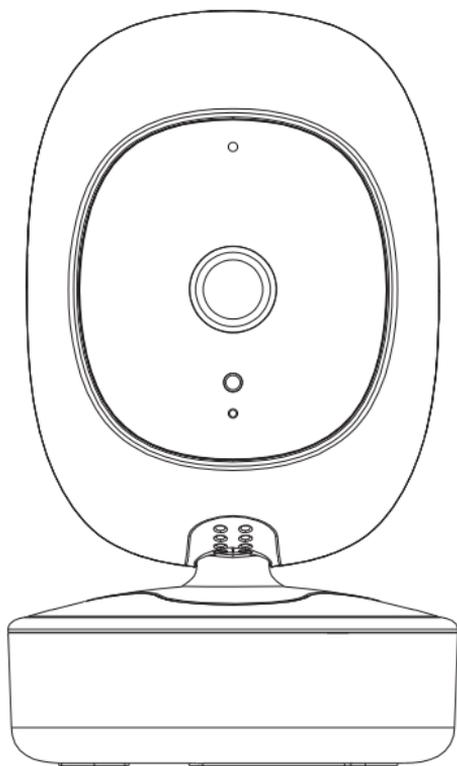

About the manual

This user manual is mainly about the product setup and installation. The in-APP instructions can guide you through every step of using the product.

Need help from our support team? Email to :

support@simshine.ai

<https://www.simshine.ai/support>

EN Download the latest user manual at the above address.

AR قم بتنزيل أحدث دليل مستخدم على العنوان أعلاه.

FR Téléchargez le dernier manuel d'utilisation à l'adresse ci-dessus.

DE Laden Sie das neueste Benutzerhandbuch unter der oben angegebenen Adresse herunter.

ES Descargue el último manual de usuario en la dirección anterior.

JP 上記のアドレスで最新のユーザーマニュアルをダウンロードしてください。

KR 위 주소에서 최신 사용자 설명서를 다운로드하십시오.

IT Scarica l'ultimo manuale dell'utente all'indirizzo sopra indicato.

RU Загрузите последнюю версию руководства пользователя по указанному выше адресу.

Contents

Product profile.....	04
What's in the box.....	05
Product diagram.....	06
Download the SimHome APP.....	07
Power on the SimCam indoor 1S.....	08
Add a new device to the APP.....	09
Install the SimCam indoor 1S.....	11
Warranty.....	12


Product profile

SimCam 1S uses on-device AI to proactively detect and record real events. It provides you with timely and actionable insights, free of subscription fees and privacy compromise.


Key features and benefits

- AI motion detection - SimCam 1S can alert you to the presence of persons, pets and vehicles in a specific activity zone - no false alerts.
- Facial recognition - keep track of the safety of your family with customized facial recognition alerts.
- Lightning-fast detection - be alerted to the event as it happens without delay.
- 24/7 video at a glance - See the whole day video in just a minute with the daily report, smart event recording and continuous recording.
- 1080P & starlight night vision - identify a person from up to 30 feet with more details, day and night.
- 360° tracking - automatically pan to follow a person on the move.
- Local processing & storage - Never have to pay any subscription fee or concern your privacy.
- AI home automation - automate other smart home devices with human activities.


What's in the box

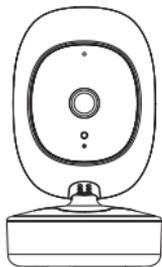

SimCam indoor 1S camera x 1

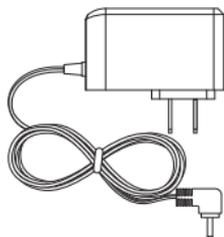

AC power adapter & cable x 1

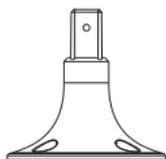

Wall mount x 1



Wall plate x 1



3M adhesive tape x 1



Hex key x 1



Reset needle x 1



SD card x 1




User manual x 1



Mounting screw x 4



Wall screw x 4


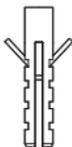


Wall anchors x 4



Holder screw x 1

Product Diagram

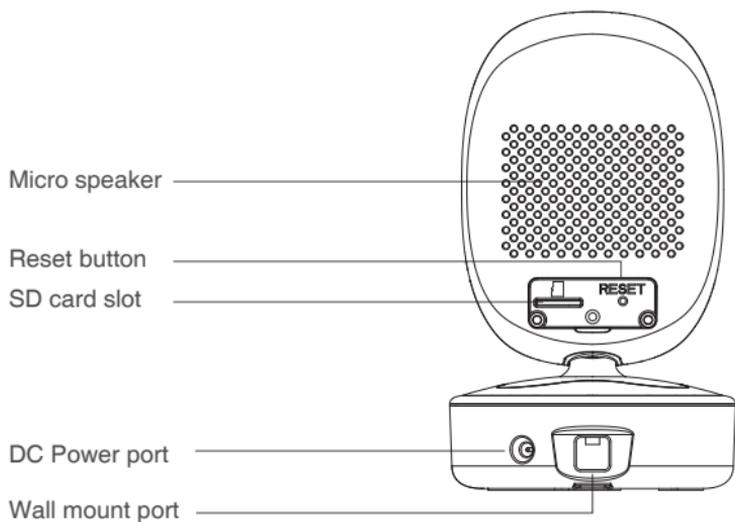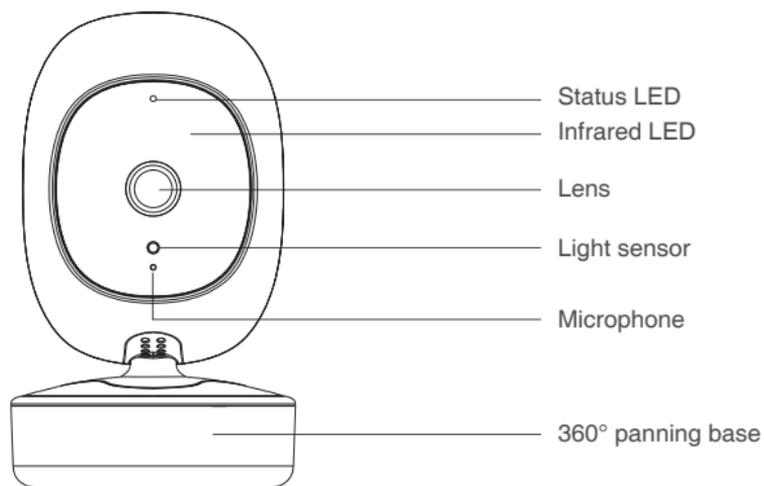

Download SimHome APP

Scan the QR code below to download and install the SimHome APP to your mobile device. You can also search for “SimHome” in Google Play or IOS App Store.


Open the APP and follow the onscreen instruction to create an account with your email address and login into your account.



Power on the SimCam Indoor 1S

Plug the power cable into the DC power port on the back of the camera. Plug the AC adapter into a 100-220V AC power outlet. The status LED will blink red indicating that the camera is powered on.

After a minute or two, the status LED will blink green indicating that it is ready to connect to WiFi.

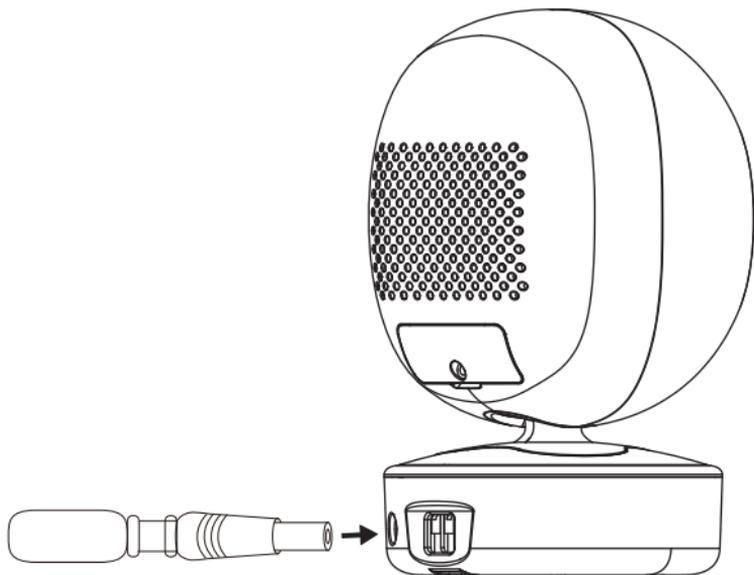


Tip: If the light does not blink green, please press the reset button and hold it for 5 seconds to reset the device.

Add a new device to the APP

Open the SimHome APP, tap “+” in the upper right corner, choose the device’s type, tap “Next”, enter your WiFi name and password, tap “Next”, enter the device’s name and select a location, tap “Next” and you will see a QR code on your mobile device.

Point the QR code to your camera’s lens. When you hear “connected”, it indicates the QR code scanning is completed. When the status LED turns solid blue, it indicates that the camera is connected to WiFi.

Tap “Next” and swipe down on the main screen of the APP to refresh the device list.

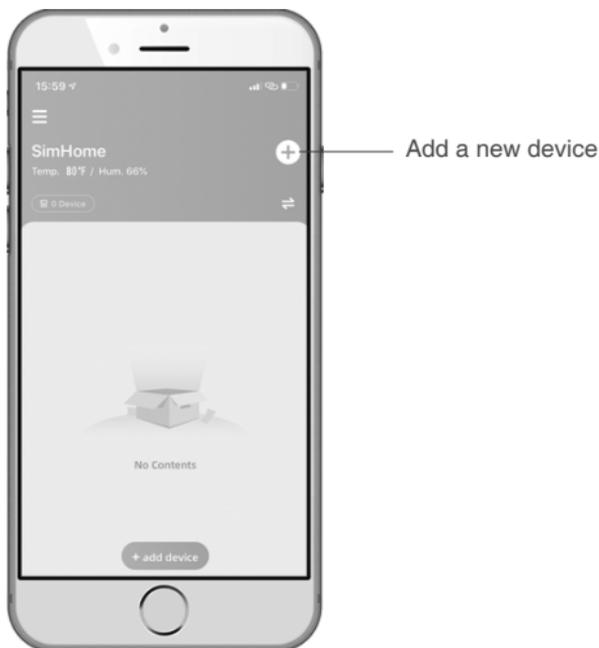

Status LED guide

Status light color	Camera's status
Solid red	The camera is powered on.
Blinking green	The camera is ready to scan the QR code.
Solid blue	The camera is connected to WiFi.
Solid green	The camera is connected to WiFi, but not connected to the Internet.


Install the SimCam 1S

Test the WiFi at the spot where you want to install the camera. Hold the camera where you want to install it and check the live stream on the APP. If you see the video smoothly with the status LED in solid blue, the WiFi is strong enough at the chosen spot.

Make sure the camera is installed within the reach of a power outlet.

Fasten the wall plate to a flat wall with wall screws. If the wall is made of brick or stone, you may need to use wall anchors to hold the screws.

Attach the wall mount to the wall plate and secure it with mounting screws. Attach the camera to the wall mount and secure it with the holder screw. Use the live feed on the APP to pan and tilt the camera to your desired position.

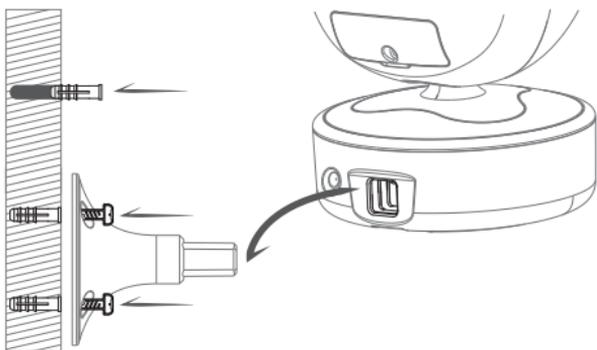

Tip: Make sure the wall can bear at least three times the total weight of the camera and wall mount.

Warranty

What does this warranty cover?

Simshine warrants that each Simshine's product you purchase is free from any defects in material or workmanship under normal use during the Warranty Period. The warranty period for a Simshine product is twelve (12) months from the day when the product is delivered to the first end-user. During the Warranty Period, SimShine will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

What is not covered by this warranty?

Defects caused by incorrect use or improper installation not following the product manual instructions;

Defects caused by unauthorized modification, repairs, disassembly or use with third-party components or product;

The serial number has been removed or defaced from the Simshine product;

Damages caused by lightning, fire, earthquake, tornado, or other events of force majeure;

Consumables parts, including but not limited to batteries, unless damage is due to defects in material or workmanship of the product;

Simshine products purchased from an unauthorized reseller;

Damage caused by third-party service providers who are not

authorized by Simshine;

Fail to provide proof of purchase that you are the authorized user of the product;

Any non-Simshine branded products, such as batteries, SD card and cables, even if sold or shipped with Simshine products;

Products marked as “Sample” or “Not for Sale”, or sold “AS IS”;

This warranty cannot be transferred from the original end-user to others;

Any indirect or consequential damages or losses resulting from the product failure such as loss of data and loss of business.

Return & Refund

If customers are not completely satisfied with the Simshine product, they can return it within 30 days after the receipt of the product.

To be eligible for a return, the product must be unused and returned in the same condition that you received it. It must also be in the original packaging. Products that show any signs of wear, or that are not packaged like new with all accessories and manuals will not be accepted under this return policy. To complete your return, we require a receipt or proof of purchase and the serial number. Customers will have to pay all the return shipping costs. No restocking fee will be charged for the return of a product.

Once your returned product is received and inspected, we will

email you a notification of receipt. We will also notify you of the approval or rejection of your refund. If you are approved, then your refund will be processed, and a credit will automatically be applied to your credit card or original method of payment, within a certain amount of days. Please note shipping charges are non-refundable.

How to obtain warranty service?

Contact Simshine support team by email support@simshine.ai or Simshine authorized resellers/repair centers and describe the product issues. They will attempt to identify and resolve the problem of your product by offering you tips and advice, software or firmware updates.

If the problem cannot be identified or resolved through remote assistance or software updates, you will be requested to return the product to the address provided by Simshine or authorized resellers.

Simshine will examine the returned product to identify the problem, if Simshine determines that the problem in question is not covered by this warranty, you will have to apply for paid repair service.

Warranty card

If you want to claim warranty service, please fill out the warranty card below and return it with the product.

Customer's Name: _____

Email: _____

Phone: _____

Address: _____

Dealer's name: _____

Dealer's address: _____

Date of purchase(DD/MM/YY): _____

Order number: _____

Serial Number: _____

Type of services: Repair Exchange Return

Description of issues: _____

The serial number can usually be found on the bottom of the product.



Simshine Intelligent Technology Co.,Ltd.

www.simshine.ai

Made in China